

OTMT

USER SERVICING INSTRUCTIONS

HIGH VELOCITY PEDESTAL FAN

MODEL	
FE2-45S3dO(5)	81-102-102



READ AND SAVE THESE INSTRUCTIONS

CAUTION: Read and follow all instructions before operating fan.

Do not use fan if any part is damaged or missing.

WARNING:

- To reduce the risk of fire or electrical shock, do not expose to water or rain.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- Automatically operated device - To reduce the risk of injury, disconnect from power supply before servicing.
- If the power supply cord is damaged, contact your local service center or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
- The appliance does not apply to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapour or gas).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION:

1. Never insert fingers or any other objects through the grill guard when fan is in operation.
2. Disconnect the fan from its power source when moving from one location to another.
3. Disconnect the fan from its power source when removing guards for cleaning.
4. Be sure fan is on a stable, flat surface when in operation.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Close supervision is necessary when this fan is used near children, the elderly and pets.
7. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
8. This fan should not be operated outside.

CAUTION: Do not alter the fan's assembly.

WARNING: Be sure that both front and rear guard screws are completely tightened in locking position before operation.

- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
- Use only 125-volt fuse, 5 amp max.
- Always unplug this product before installing or replacing fuses.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- **Open fuse cover:** Slide open fuse access cover on top of attachment plug towards blades, or Push on tabs located next to the blades.
- Remove fuse carefully.
- Risk of fire. Replace fuse only with _5_ Amp, 125 Volt fuse (provided with product).
- **Close fuse cover:** Slide closed the fuse access cover on top of attachment plug, or Push cover closed so that all tabs latch.
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

ASSEMBLY INSTRUCTION

1. Attach CAST COUPLING to the BASE with the 4 screws as shown.
2. Loosen KNOB on COUPLING and extend INNER TUBE To desired height.
3. Slide COVER RING down the OUTER TUBE to rest on top of the BASE.
CAUTION: KNOB must be fully tightened before assembling the FAN HEAD to the INNER TUBE.
4. Fan head and supporting brace come fully assembling.
5. Place the FRONT MOUNTING PLATE and the REAR MOUNTING PLATE to the center hole of the SUPPORT TUBE. Tighten the screw as shown.
6. Firmly attach SUPPORTING TUBE to the INNER TUBE using the 2 mounting screws and spring washers provided.

OPERATING INSTRUCTIONS

TO ADJUST AIRFLOW UPWARD OR DOWNWARD:

Tilt fan head to the desired angle.

SPEED CONTROL:

Select air speed by setting switch to either HIGH(3) - MIDDLE(2) - LOW(1) - OFF(0). It is normal for the motor to feel warm to touch after continuous operation. This fan features a thermostat that will automatically shut off should it overheat for any reason. If this happens, immediately unplug the fan from the outlet.

CLEANING

WARNING: Unplug from electrical supply source before cleaning.

1. Use soft damp cloth to clean, then wipe with dry cloth.
2. Do not use a cleaning solution that is harmful to paints or plastics.
3. Do not bend the blades.
4. Put several drops of sewing machine oil into the oil ways on the front and rear shells at regular intervals (Once after 3 months of 24 hour use or 6 months of regular use).

RATING

FE2-45S3dO(5) 81-102-102 120V~ 60Hz 1.15A

